

Supplimental Installation Instructions

Chain Tensioner


The chain tensioner assembly on this product is compliant with ANSI/WCMA A100.1-22 Safety Standards effective June 1, 2024. The chain tensioner is designed to be permanently attached to the pull chain. The chain tensioner is locked onto the chain and will prevent proper operation of the shade until it is properly installed. Fasteners provided with the tension device may not be appropriate for all mounting surfaces. Use appropriate anchors for mounting surface conditions.

INSTALLATION

1. Pull the chain tensioner downward until the chain is tensioned and the spring plunger is fully raised. When the plunger is fully raised the chain will be unlocked from the pull chain.
2. Use a pencil to mark the screw mounting locations through the tensioner mounting holes.
3. If needed, use a drill and pre-drill a hole for the mounting screws.
4. Use both screws to securely mount the tensioner device onto the wall.



⚠ WARNING

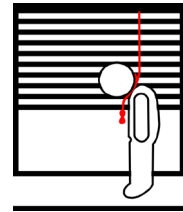

Products with a Damages, Loose, or Missing Tension Device Pose a Strangulation Risk to Children

- Remove from use and repair or replace if tension device is damaged, loose or missing.
- Tension device must be securely attached to wall or floor.
- Children can climb on furniture to reach cords.

OUTSIDE MOUNT OPTION

1. Use the chain tensioner marked screw hole locations as a reference and mount the bracket with the large screws.
2. Install the chain tensioner onto the bracket with the small screws.
3. Bracket and tensioner mounted.

