
Cellular Slider Shade Assembly and Installation Instructions Left/ Right Stack

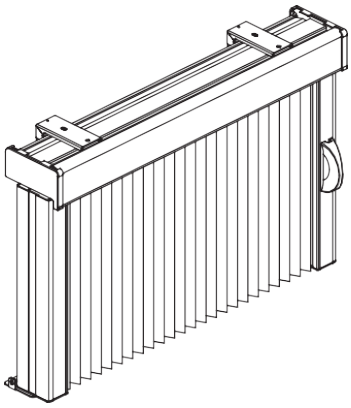

THANK YOU FOR PURCHASING THE CELLULAR SLIDER SHADE!


- Ensure you have enough space to assemble the shade. **Assemble it on a clean floor**, especially when it is inside mount.
- Unwrap the packaging carefully as not to cut the cords, fabric, parts, or scratch the rail.
- Before you begin to assemble and install, make sure the mounting location and height matches with the product.
- The package includes the following.
  - Headrail
  - Shade body
  - Installation parts
  - Spare kit




INSTALLATION PARTS



#2240325
Screws for the headrail metal end plates




#PLP4115L
Headrail End Cap



#PLP4115R
Headrail End Cap

#2233022

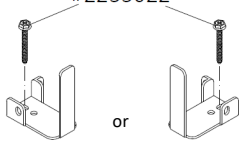


#PLP4143L
Stationary rail bottom bracket for left stack


or

#PLP4143R
Stationary rail bottom bracket for right stack

#PLP4112 Headrail Brackets

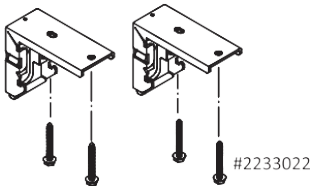

#2233022

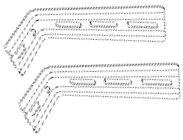

Extension bracket (optional)

SPARE KIT



#2240325
Screws for the headrail metal end plates

Quantities of the headrail, bottom, and extension brackets


Slider Shade	Left/ Right Stack		
Shade Width	**Headrail bracket**	**Stationary rail bottom bracket**	**Extension bracket (optional)**
< 71.9”	2	1	3
72” ~ 107.9”	3	1	4
108” ~ 140”	4	1	5

*The quantities above apply to both inside and outside mount.

ASSEMBLE THE SLIDER SHADE ON A CLEAN FLOOR

STEP 1. LOOSEN THE CORD. ASSEMBLE VERTICAL RAILS WITH THE HEADRAIL.

Slide the shade from the side of the moving rail into the headrail. Make sure all the fabric carriers are into the track. The cord should come out from the hole of the front side. Refer to the image below.

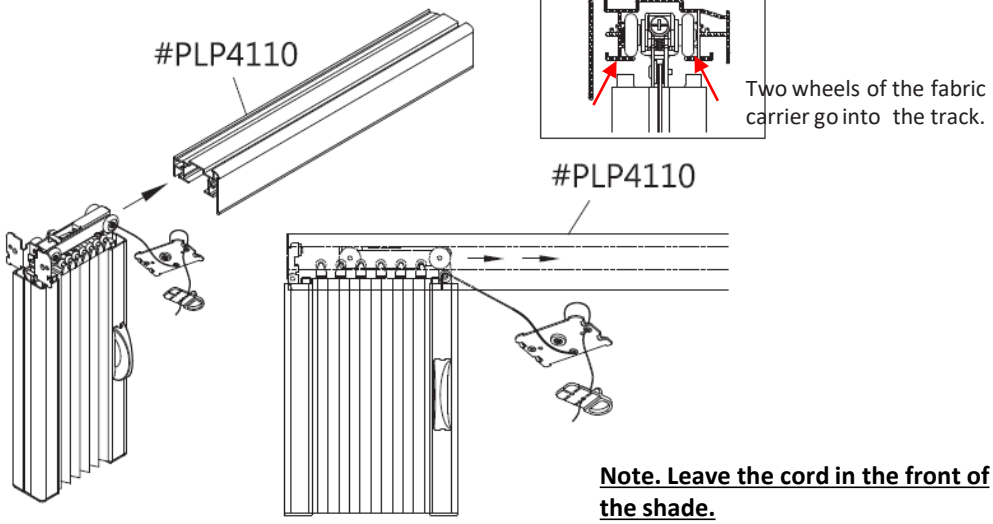

Side view of the headrail


Two wheels of the fabric carrier go into the track.



Note. Leave the cord in the front of the shade.


TIP 1. Loosen the fabric a little bit will help you to slide fabric carriers into the headrail easier.
TIP 2. If the moving rail bracket gets stuck by the headrail, loosen the screw slowly until the bracket slides into the headrail.

Moving rail bracket

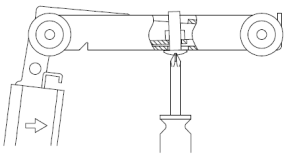


counter-clockwise to loosen the screw

STEP 2. FASTEN METAL PLATES TO THE HEADRAIL BY USING THE SMALL SCREWS (ITEM# 2240325).

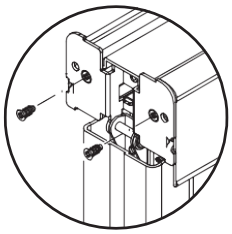


Move and straighten the metal plate, and then attach it to the headrail. Tighten 2 screws on.

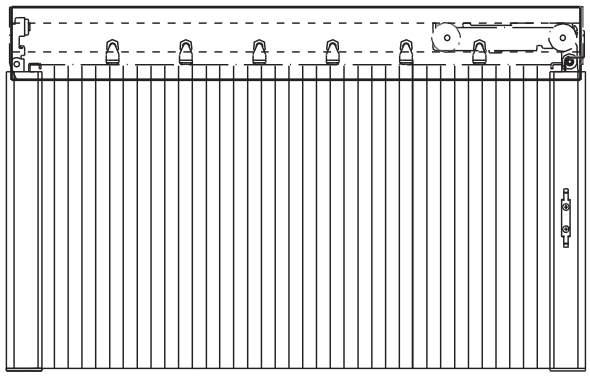

Stationary rail


Moving rail

#2240325

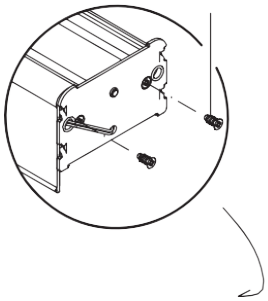


Attach the metal plate to the moving rail side of the headrail. Make sure the cord go through the front hole.
Tighten 2 screws on. Refer to the image above.


STEP 3. PUT THE END CAP TO EACH SIDE OF THE HEADRAIL. INSERT THE FLOOR BRACKET TO THE BOTTOM OF THE STATIONARY RAIL.

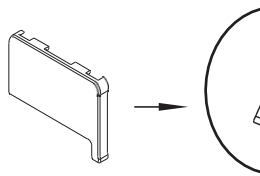


#PLP4115L
Headrail End Cap

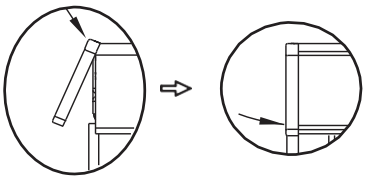

Hook the end cap to the headrail, and then push in.

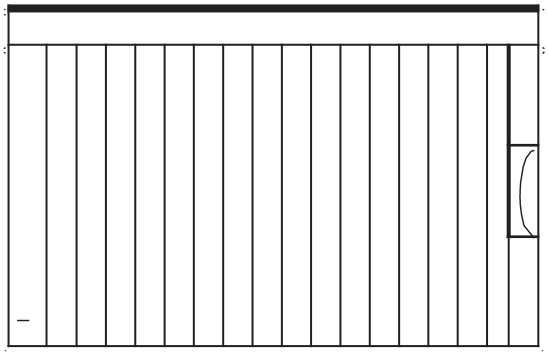




#PLP4115R
Headrail End Cap




Insert the bottom bracket to the bottom of the stationary rail.
Follow the step 3 on page 3 to install the bottom rail bracket to the wall or to the floor.

INSTALL THE SLIDER SHADE

STEP 1. MOUNT HEADRAIL BRACKETS.

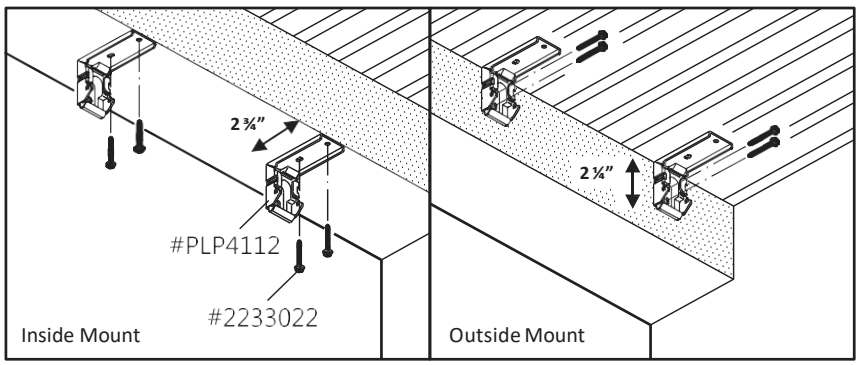


Minimum Mounting Space		
Inside Mount	Minimum Mounting Depth	Flush Mount Minimum Depth
	2-3/4"	4"
Outside Mount	Minimum Flat Vertical Surface	
	2-1/4"	




Extension brackets

Note – To install the shade away from the window, use extension brackets when mounting the headrail brackets.


STEP 2. AFTER ASSEMBLING THE CELLULAR SLIDER SHADE, THEN ATTACH IT TO HEADRAIL BRACKETS.

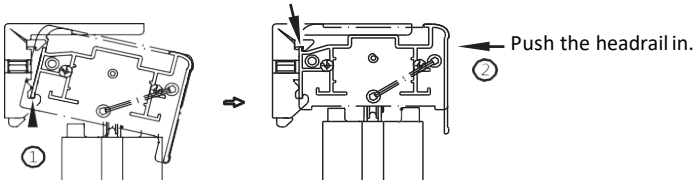

Note. To release the headrail from the brackets, simply push the button under the headrail bracket to release the headrail.

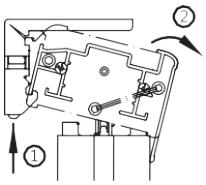


STEP 3. FIX THE STATIONARY RAIL TO THE WALL OR TO THE FLOOR WITH THE STATIONARY RAIL FLOOR BRACKET.

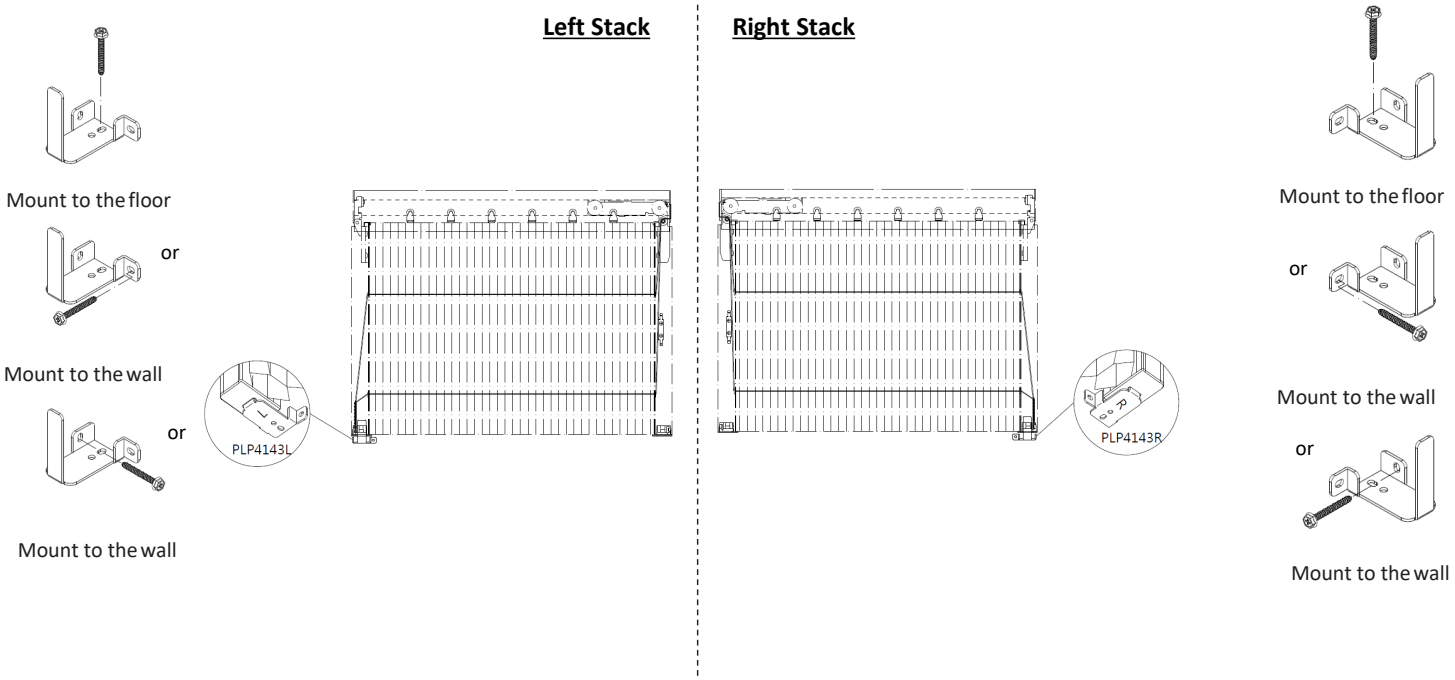

If there is a distance to the wall, use the extension bracket.

Example.
Mount the bottom bracket to the wall with an extension bracket.

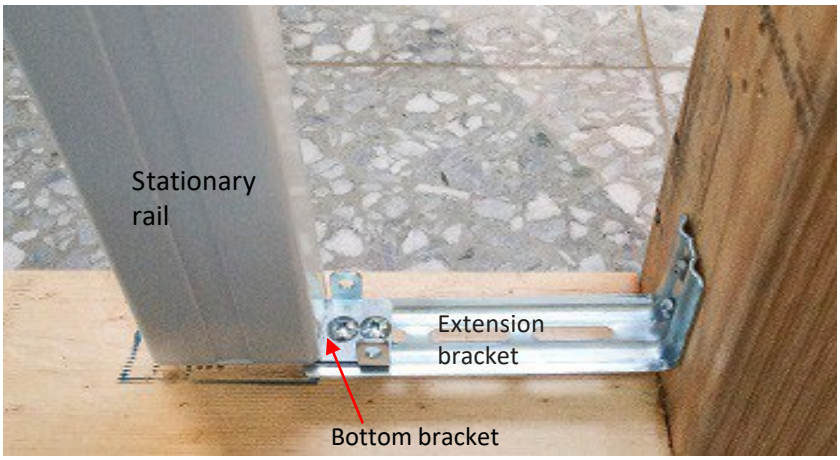


STEP 4. ADJUST THE TENSION OF THE CORD TO ENSURE THE MOVING RAIL MEETS 2 CONDITIONS BELOW.


Condition 1. The moving rail doesn't bounce toward the stationary rail.

- Move the tension adjuster down to loosen more cord when the moving rail bounces toward the stationary rail.

Condition 2. The moving rail stays at the location you desire.


- Adjust the location of the tension adjuster up or down to tighten or loosen the tension of the cord to allow the moving rail to stay still.

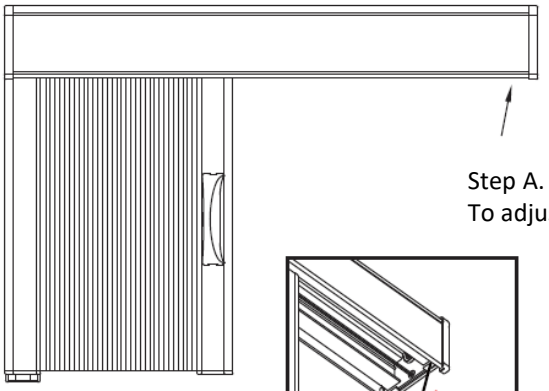

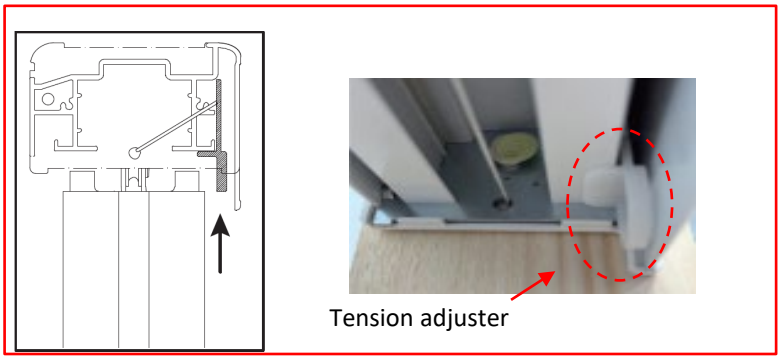

Tension adjuster

Step A.
To adjust the tension, pull the tension adjuster down from underneath the headrail.

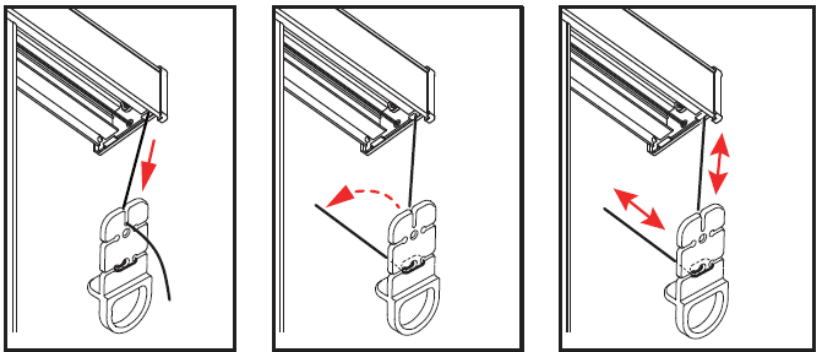

Step B.
Release the tied cord.


Step C.
Move the tension adjuster up or down to adjust the cord tension. Check the position of the movable rail every time the location of the tension adjuster is modified. Adjust it until the moving rail meets conditions #1 & #2 above.

STEP 5. THE VERTICAL ALIGNMENT FOR THE MOVING RAIL.


NOTE.

- **LOOSEN THE CORD TENSION BEFORE STRAIGHTEN THE MOVING RAIL.**
- **THE MOVING RAIL BRACKET SCREW SHOULD NOT BE OVERTURNED. THE SCREW THAT IS OVERTURNED MAY INCREASE THE DIFFICULTY OF STRAIGHTENING THE MOVING RAIL.**
- **CHECK THE STRAIGHTNESS OF THE MOVING RAIL FOR EVERY HALF TO ONE TURN OF THE SCREW.**


❑ Straightening a **RIGHT** oblique moving rail.

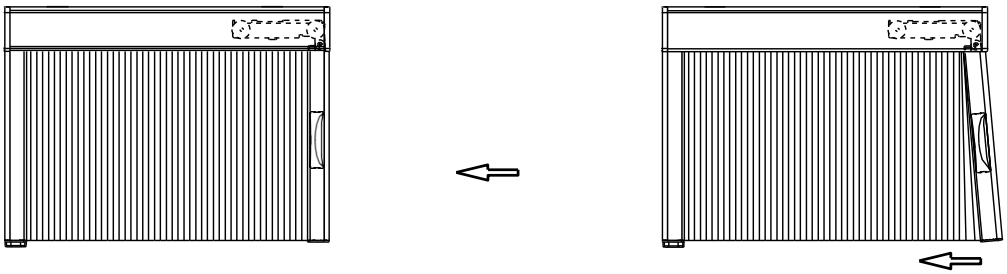

Turn the screw counter-clockwise slowly to adjust the straightness of the moving rail.

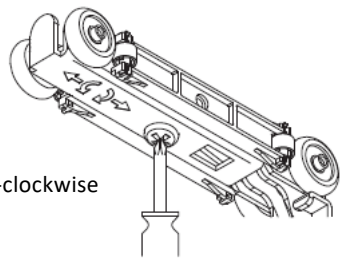


counter-clockwise

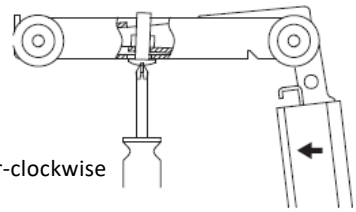



counter-clockwise

❑ Straightening a **LEFT** oblique moving rail.

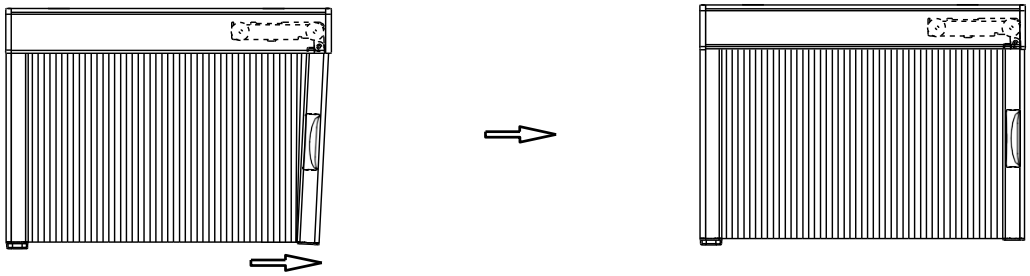


Turn the screw clockwise slowly to adjust the straightness of the moving rail.

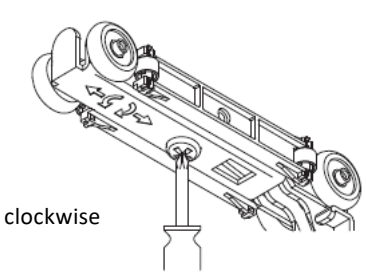

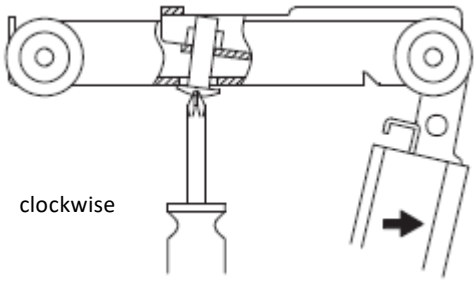

STEP 6 . TIE THE TENSION ADJUSTER

- Double check the cord tension and the moving rail position.
- Follow the images below to tie the tension adjuster.

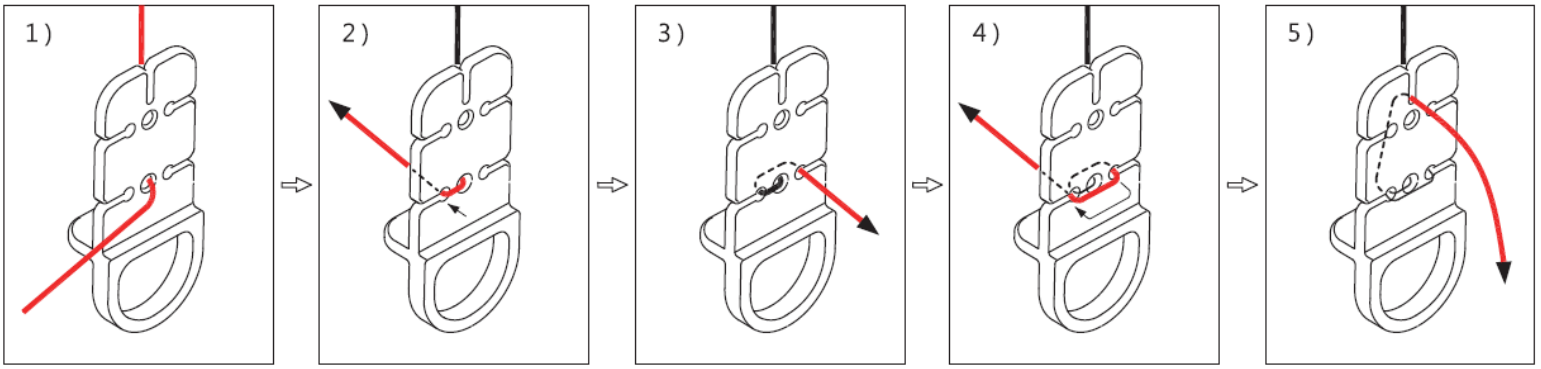

STEP 7. KEEP THE TENSION ADJUSTER IN PLACE.

- Hide the cord stop (donut) and extra cords at the back side of the front lip of the headrail.



Tension adjuster



Extra cord